
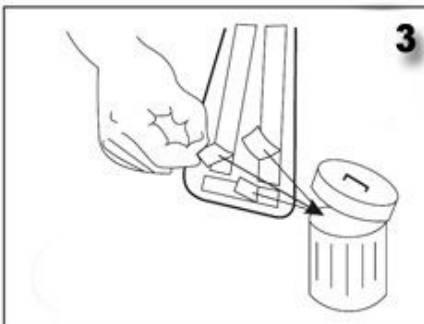
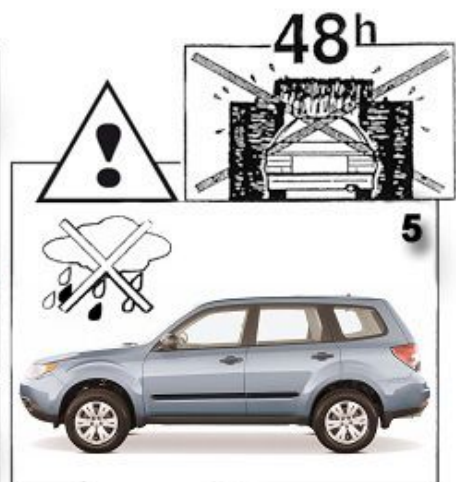
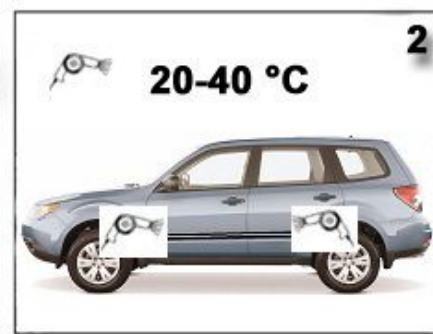
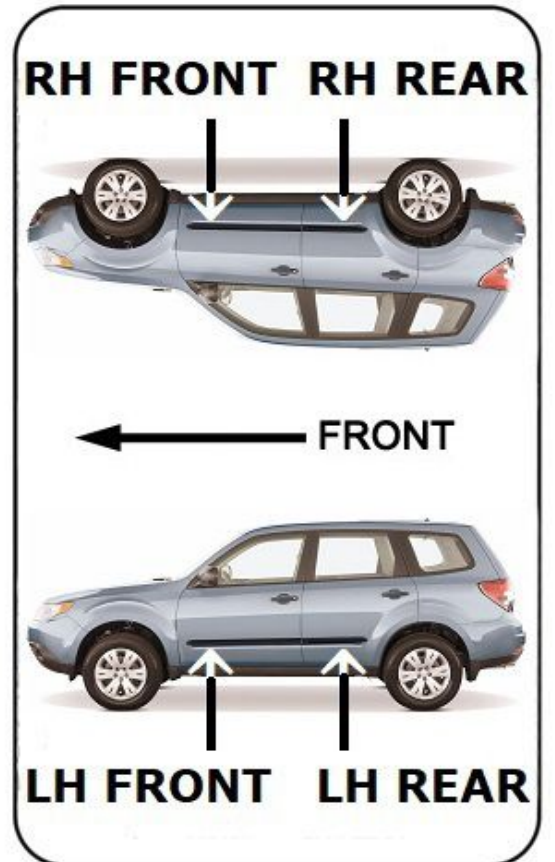


Subaru Forester III 2008-12

PU Side Mouldings

F-2

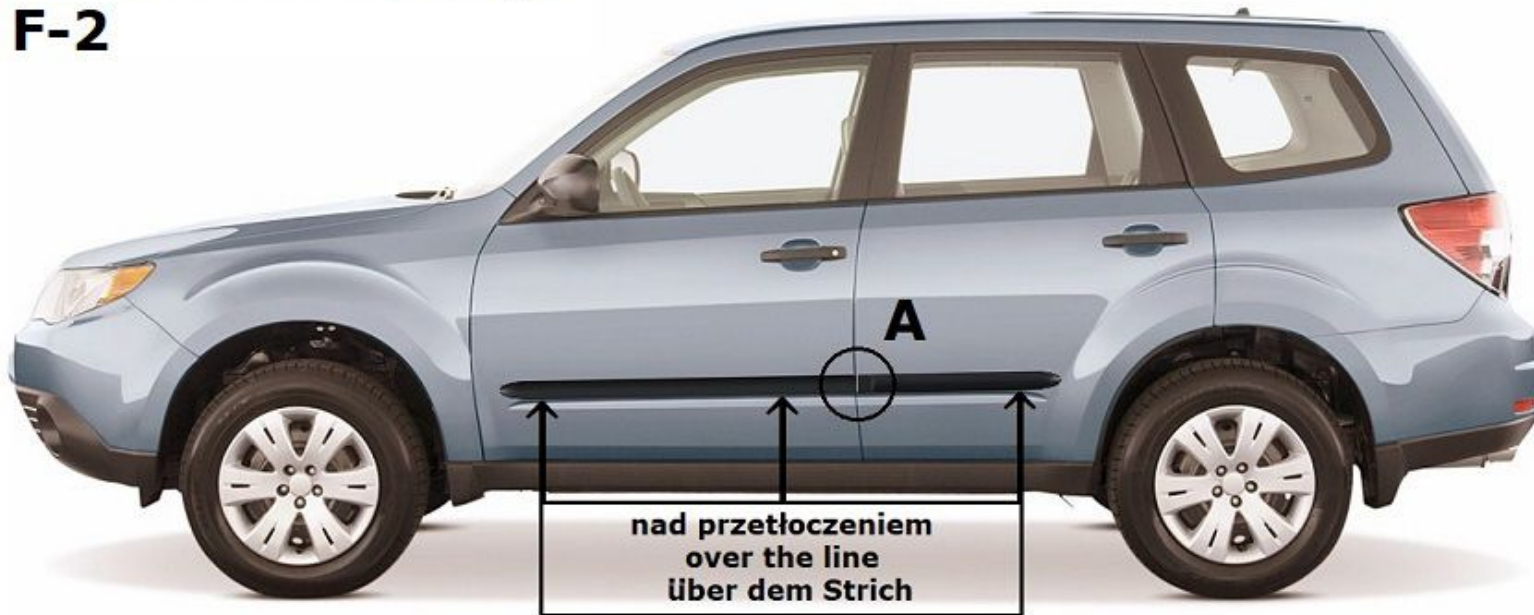

ledere cm goed aandrukken !!
Press very carefully every cm !!
Sehr fest andrücken jeden cm !!

